

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10
- 11
- 12
- 13
- 14
- 15
- 16
- 17
- 18
- 19

1 SENSOR HOLDER BRACKET

In black polyamide based (PA) technopolymer, watertight, incorporating the relay (reed) with two conductors wired to the connector. It can be moved along the axis of the indicator and secured in the preferred position with the appropriate screw (set screw) in technopolymer.

2 ELECTRIC SENSOR

With NO and NC (initial status of the reed sensors) we mean the condition of the electrical contact when the tank is full and therefore the float is in the upper position (Fig.1).

- NC: the electrical circuit closes when the float crosses the sensor during the tank filling phase. In the same way, the electrical circuit opens when the float passes through it during the emptying phase of the tank.
- NO: the electrical circuit opens when the float crosses the sensor during the tank filling phase. In the same way, the electrical circuit closes when the float passes through it during the emptying phase of the tank.

3 FLOAT

Polypropylene based (PP) technopolymer, max temperature limit 80° C or polyamide based (PA) technopolymer, max temperature limit 120°C, max chemical compatibility, black colour.

The float incorporates a magnetic element to activate the electric contact. When the float reaches the intervention level set by the user, by suitably positioning the sensor holder along the axis of the indicator, the electrical contact activates.

Max operating pressure 2 bar (operation with oil)

4 SPACER SLEEVES

In polyamide based (PA) technopolymer. Essential in cases where the reservoir is made out of ferromagnetic material in order to prevent the interaction between the magnet and the metal mass of the reservoir.

5 MALE CONNECTOR

- DIN 43650 C connector in glass-fibre reinforced polyamide based (PA) technopolymer, black colour.
- 4-pole M12x1 connector, with threading in glass-fibre reinforced polyamide based (PA) technopolymer certified self-extinguishing UL-94-V0, black colour, matte finish.

For a correct assembly see Warnings (on page 1227).

6 FEMALE CONNECTOR (DIN 43650 C)


With built-in cable gland and contact holder. Front or axial output (high or low) ensuring protection against water sprays (protection class IP 65 according to table EN 60529 on page A-19) can be increased during installation with the appropriate precautions.

NBR synthetic rubber packing ring.

7 KIT

The kit includes one or two sensor holder brackets, a float, 4 O-rings (2 FKM for HCK-GL and 2 NBR for HCK), two spacers and two M12 UNI 5589 AISI 316 stainless steel nuts.

It is possible to apply more than one kit to get the electric control of different levels, consistently with the height of the transparent column.

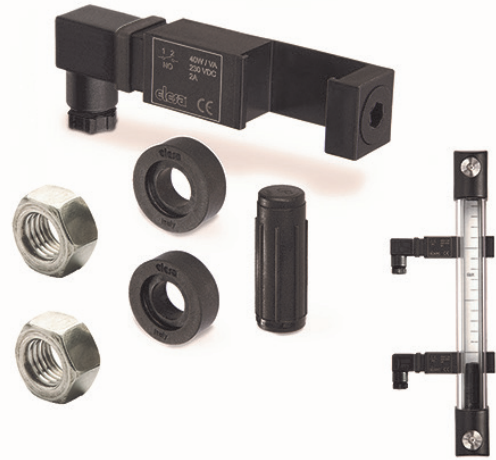

ELESA Original design

STANDARD EXECUTIONS

For applications with temperatures up to 80°C: polypropylene based (PP) technopolymer float.


- **SLCK-NO**: with electric contact normally open.
- **SLCK-NC**: with electric contact normally closed.
- **SLCK-NO-NC**: with one electric contact normally open and one electric contact normally closed.
- **SLCK-NC-NC**: with two electric contacts normally closed.
- **SLCK-NO-NO**: with two electric contacts normally open.

For applications with temperatures up to 120°C: polyamide based (PA) technopolymer float.

- **SLCK-HT-NO**: with electric contact normally open.
- **SLCK-HT-NC**: with electric contact normally closed.
- **SLCK-HT-NO-NC**: with one electric contact normally open and one electric contact normally closed.
- **SLCK-HT-NC-NC**: with two electric contacts normally closed.
- **SLCK-HT-NO-NO**: with two electric contacts normally open.
- **KN**: suffix to be added for versions with M12 male connector

Electric sensor	Contact status	
	Tank full	Tank empty
SLCK-NO	NO	NC
SLCK-NC	NC	NO


Fig.1

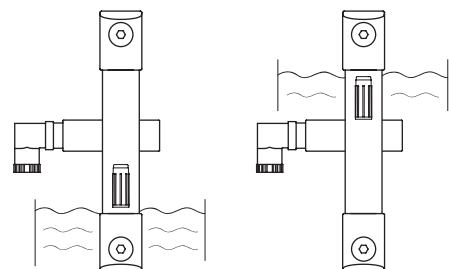

Level sensor electric characteristics	
Power supply	AC/DC
Electric contacts	NO normally open
	NC normally closed
Maximum applicable voltage	DIN 230 Vdc / Vac
	KN max 30 Vdc / Vac
Voltage range (Type KN)	<30 Vac, <30 Vdc
Maximum current (CC CA)	2 A
Maximum commutable power	40 W / VA
Cable gland (Execution with DIN connector)	Pg 7 (for cables in sheath with Ø 6 or 7 mm)
Conductors cross-section (Execution with DIN connector)	Max. 1.5 mm ²
Do not mount this indicator in proximity to magnetic fields.	

ACCESSORIES ON REQUEST

FC-M12x1 (on page -) extensions with 4 pole M12 female axial connector.


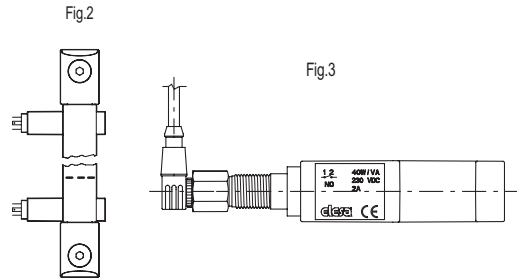


KIT ASSEMBLY INSTRUCTIONS

- Remove the indicator fixing terminal (Fig.4).
- Insert the sensor holder bracket (Fig.5).
- Insert the float with the word "up" or the spherical end facing upwards and reallocate the fixing terminal in position (Fig.6). The float must pass through the position of the sensors for correct initialisation.
- Lock the bracket in the desired position with the grub screw (Fig.7).
- Install the indicator on the tank using the spacers included in the supply (necessary if it is a tank made of ferromagnetic material to avoid interactions between the magnet and the metal mass) (Fig.8).
- If the walls of the tank are thin and therefore it is not possible to have threaded holes, use the nuts supplied (max door thickness = 2mm) (Fig.9).
- Mount the bipolar connector after having wired it (output DIN 43650 C) (Fig.10).

TWO-PIN CONNECTOR ASSEMBLY INSTRUCTIONS

1. Remove the connector from the sensor holder bracket by unscrewing the axial set screw, take off the contact holder and unscrew the cable gland as required.
2. Slip on the cable into the connector and connect the wires to the terminals of the contact holder.
3. Assemble by pressing the contact holder into the connector (the contact holder can be rotated by 90° in four positions to have a different orientation of the connector).
4. Screw again the connector to the sensor holder by means of the axial set screw and then tighten the cable gland.

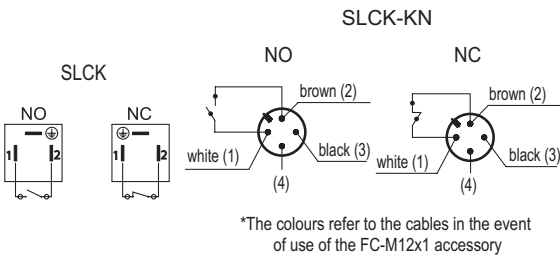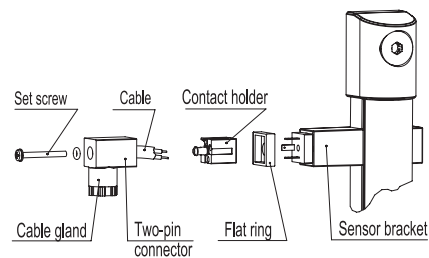

FEATURES AND PERFORMANCES

With the application of the SLCK kit, HCK and HCK-GL column level indicators provide an electric signal when the fluid level reaches the level of preset intervention, besides the visual control of the level. The electric control of the level can be applied on all versions of HCK, from the version with 127 mm hole centre distance while always maintaining the visibility of fluid level even from side positions.


In the highest position, for switching to occur correctly, the sensor holder must be positioned at least 45 mm below the axis of the high screw (Fig.2).

In the lowest position, the level of the fluid which determines the switching of the electrical circuit is approximately 55 mm above the axis of the low fluid supply screw (data refers to mineral oil type CB68, according to ISO 3498, temperature 23°C) (Fig.2).


The sensor holder is arranged to be installed to the left with respect to the axis of the indicator. However, if required it can also be mounted on the right. The connector can be rotated by 90° in four positions when wiring.

For a correct assembly see Warnings (on page 1227).


In case of use of an extension with angled connector, the direction of the cable output is shown in Fig.3.

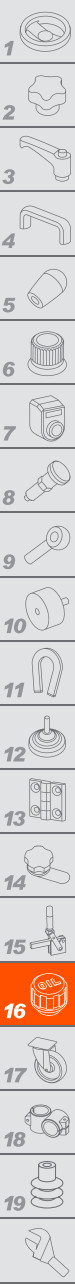

Accessories for hydraulic systems

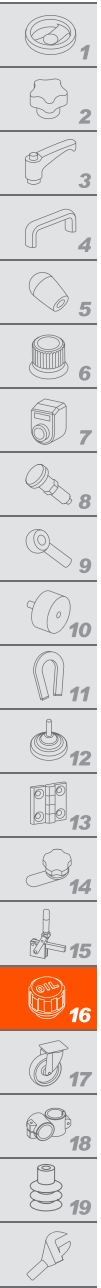

Accessories for hydraulic systems

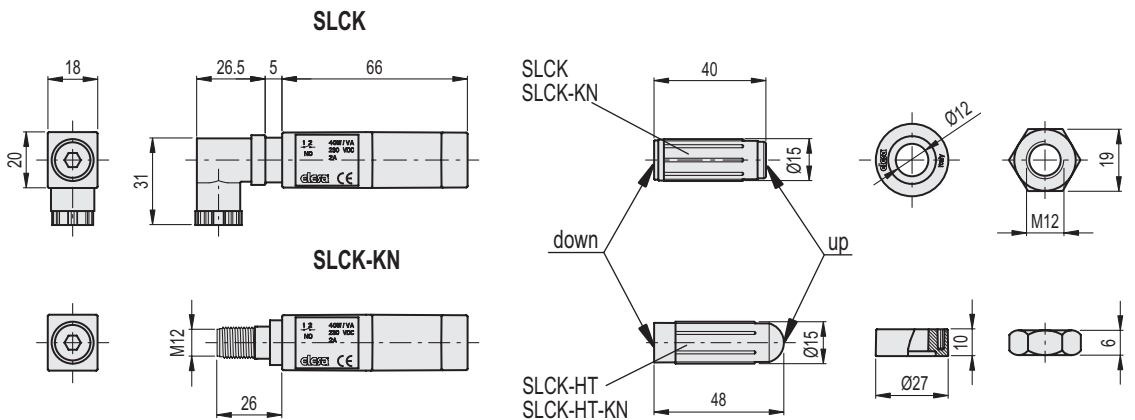

METRIC

SLCK

Code	Description	△
110081-R	SLCK-NO	253
110083-R	SLCK-NC	253
110085-R	SLCK-NO-NC	253
110087-R	SLCK-NC-NC	253
110089-R	SLCK-NO-NO	253

SLCK-KN

Code	Description	△
110081-R-KN	SLCK-NO-KN	180
110083-R-KN	SLCK-NC-KN	180
110085-R-KN	SLCK-NO-NC-KN	180
110087-R-KN	SLCK-NC-NC-KN	180
110089-R-KN	SLCK-NO-NO-KN	180

SLCK-HT

Code	Description	△
110082-R	SLCK-HT-NO	253
110084-R	SLCK-HT-NC	253
110086-R	SLCK-HT-NO-NC	253
110088-R	SLCK-HT-NC-NC	253
110090-R	SLCK-HT-NO-NO	253

SLCK-HT-KN

Code	Description	△
110082-R-KN	SLCK-HT-NO-KN	180
110084-R-KN	SLCK-HT-NC-KN	180
110086-R-KN	SLCK-HT-NO-NC-KN	180
110088-R-KN	SLCK-HT-NC-NC-KN	180
110090-R-KN	SLCK-HT-NO-NO-KN	180